Bullet Boot

The Bullet Boot is an attractive, environmentally responsible alternative to traditional lead pipe flashings for asphalt shingle roof pipe penetrations.

FEATURES & BENEFITS:

- ➜ Fast, easy installation — no painting required.
- ➜ Available in seven colors to complement today's most popular asphalt shingles.
- ➜ 100% UV protected flexible TPE construction.
- ➜ Non Staining and adapts to almost any roof pitch.
- ➜ Very affordable with a 35 year manufacturers warranty.
- ➜ Covers the pipe inside and out and includes built in pest screen
- ➜ Adaptable to multiple roof pitches
- ➜ Florida Product Approval # FL25870-R2

7 colors available to fit pipe sizes 1.5", 2", 3" and 4"

See Reverse for Installation Instructions

SPECIFICATIONS:

UV Protected TPE Material with Plastic Removable Pest Screen.

TENSILE STRENGTH: 1825 psi - ASTM D412

TEAR STRENGTH: 195 lbs/in - ASTM D624

SERVICE TEMP: -59 deg c to 90 deg c

WIND UPLIFT RESISTANCE: -45 PSF (8 fasteners) -160 PSF (16 fasteners)

Design Wind Uplift Pressure Resistance in ASD with Safety Factor of 2-1.

Florida Product Approval # FL25870-R2, Evaluation Report 17-209-BB-ER

Environmental Resistance: Excellent Resistance to Ozone, UV, Water, Alcohol, Weak Acids & Chlorine.

MADE IN THE USA

LAKESIDE™ CONSTRUCTION FASTENERS
a DMI DIRECT METALS Company

To purchase contact us at:
6500 Highway 135 North, Paragould, AR 72450
870-586-0703 *(office)* \ ***800-537-4160*** *(toll free)*
www.lakeside-fasteners.com

Bullet Boot

GENERAL INSTALLATION

WET FIT APPLICATION:

Fitting: Remove interfering shingle fasteners around the perimeter of the roof opening. Depending on the application, apply a continuous bead of sealant along the bottom of the flange, then slide the top of the boot up and under the shingle. Allow the bottom flange to rest on top of the shingles, or trim the shingle as needed for a proper fit.

MOUNTING:

Care should be taken to keep the boot properly aligned. Secure the Bullet Boot using carbon or stainless Pro-Cliplok roofing fasteners, spaced 16" on center, with a minimum of three fasteners per side, located no more than 1" from the outer edge of the flange and 1.5" from each corner.

Apply sealant to all shingle edges. In severe weather and coastal hurricane zones, seal the entire perimeter, beneath the flange, and around the outer edges with sealant. Seal all exposed carbon or stainless fastener heads (optional) with sealant to provide long-lasting moisture protection and corrosion resistance.

ASSEMBLY SIDE VIEW

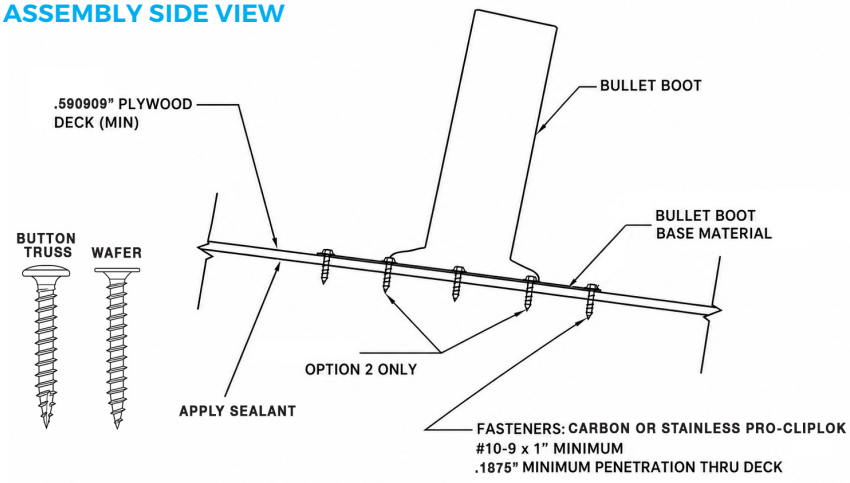

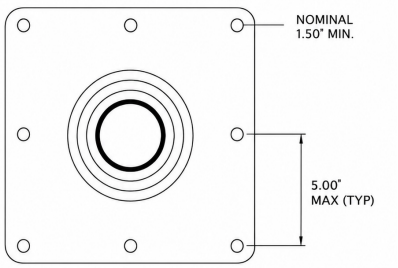

OPTION 1: 8 FASTENERS

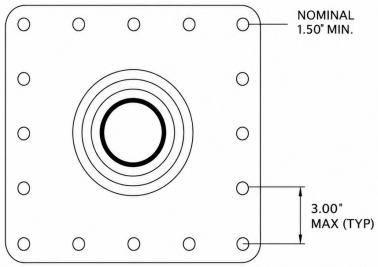

OPTION 2: 16 FASTENERS

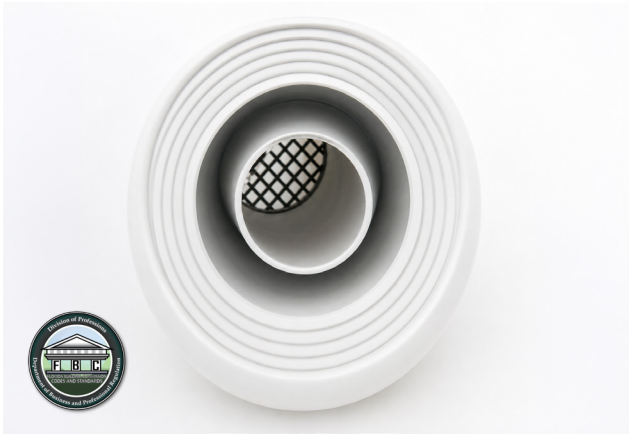

Florida Product Approval # FL25870-R2

SIZE/COLOR	QTY/BOX
1.5" WHITE	16
1.5" BROWN	16
1.5" GRAY	16
1.5" BLACK	16
1.5" WEATHERED WOOD	16
1.5" TAN	16
1.5" TERRACOTTA	16
2" WHITE	16
2" BROWN	16
2" GRAY	16
2" BLACK	16
2" WEATHERED WOOD	16
2" TAN	16
2" TERRACOTTA	16
3" WHITE	16
3" BROWN	16
3" GRAY	16
3" BLACK	16
3" WEATHERED WOOD	16
3" TAN	16
3" TERRACOTTA	16
4" WHITE	8
4" BROWN	8
4" GRAY	8
4" BLACK	8
4" WEATHERED WOOD	8
4" TAN	8
4" TERRACOTTA	8

LAKESIDE CONSTRUCTION FASTENERS
a DMI DIRECT METALS Company

To purchase contact us at:
6500 Highway 135 North, Paragould, AR 72450
***870-586-0703** (office) \ **800-537-4160** (toll free)*
www.lakeside-fasteners.com