DEKS

Easy to Work With

Retrofit® Original

When it has to flash around, not over

bsi. ISO 9001 Quality Management FS 520679

UPC®

- **Fast and Efficient installation**
  Wraps around existing or difficult to access pipes
- **Snaps together in seconds**
  The built-in crimp means no loose clips or rivets
- **Grips tight and stays tight**
  Made from DEKS quality polymer compound
- **Our base makes easy work**
  Aluminium base conforms to roof with ease
- **Twenty five year warranty**
  Just fit it and forget it - we've got you covered

LAKESIDE™ CONSTRUCTION FASTENERS

To Order Call: 800-537-4160 Or Visit our Website

www.lakeside-fasteners.com

10-2023_V4

DEKS

Easy to Work With

WARRANTY DEKS SILICONE 35 YEAR OR EPDM 25 YEAR WARRANTY

Selection Guide

DEKS Code			Description	Pipe OD		Base		Pitch	Carton QTY
Black EPDM	Grey EPDM	Red Silicone		mm	inch	mm	inch		
RF801B	RF801G	RF901RE	Dektite Retrofit #1	20-70	¾" - 2¾"	160	2¾ x 2¾"	0 - 40° or 10/12	10
RF802B	RF802G	RF902RE	Dektite Retrofit #2	50 - 190	2 - 7½"	273	4 x 4"	0 - 40° or 10/12	5
RF803B	RF803G	RF903RE	Dektite Retrofit #3	85 - 255	3¼" - 10"	389	4 x 4"	0 - 40° or 10/12	5
	RFS4	RFS24	Dektite Soaker	235 - 425	9¼" - 16¾"	762 x 680	5⅛ x 5⅛"	0 - 40° or 10/12	2

Available in Black and Grey EPDM or Red Silicone

EPDM will withstand contstant temperatures at the roofline of -50 °C (-58°F) to 115°C (239°F) and up to 150°C (302°F) intermittently. Red Silicone will withstand constant temperatures at the roofline of -50° C (-58°F) to 200°C (392° F) and up to 250°C (482° F) intermittently.

Please Note That the outside temperature of the pipe may be significantly different to the exit temperature of the appliance.

Installation Information

1 Trim cone to suit pipe size using sharp tin snips.

2 With clip in downstream position, wrap top of cone around pipe and engage metal teeth in opposing pockets starting at the top.

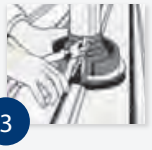

3 To assist locating clip into pocket, place hand behind seam. Fasten clip with pliers or mulitgrips, working from top to base. Do not over crimp.

4 Apply sealant to underside of Dektite® base and shape to roof by hand.

5 Fasten flashing down and secure clip by placing a fastener either side of clip first.

6 Apply sealant to top of crimp closure and any other potential leak areas.

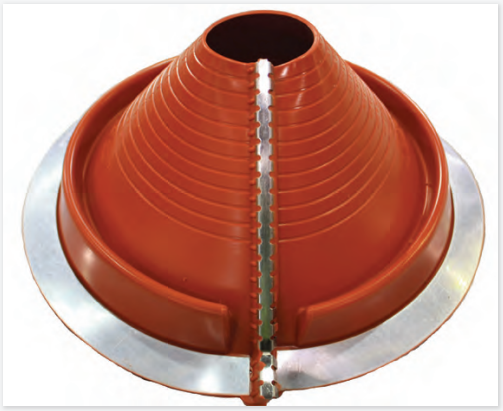

- Always use the neutral cure low modulus silicone for sealing
- Use 10 x 16 (⅜" x ⅝") Hex head self-drilling screws
- In corrosive and coastal environments fix using blind aluminium rivets

Need to flash a square penetration? Contact DEKS to discuss the square flashing range.

LAKESIDE CONSTRUCTION FASTENERS

To Order Call: 800-537-4160 Or Visit our Website

www.lakeside-fasteners.com